



## INSTALLATION INSTRUCTIONS

THE FOLLOWING INSTRUCTIONS ASSUME THAT THE LUMINAIRE TO BE RETROFITTED HAS BEEN STRIPPED OF EXISTING COMPONENTS (DOOR ASSEMBLY, LAMPS, BALLAST COVER, SOCKET PLATES AND LAMPHOLDERS) AND THAT POWER TO LUMINAIRE HAS BEEN TURNED OFF.


1. DISCONNECT BALLAST FROM POWER SUPPLY
- 2** INSTALL MOUNTING BRACKETS CENTERED AT EACH END OF EXISTING HOUSING AS SHOWN.
- 3** USING ONE "TEK" SCREW ATTACH SAFETY CABLE (OR CHAIN) MOUNTING ANGLE TO THE TOP OF THE EXISTING HOUSING APPROXIMATELY 10" FROM THE END OF THE FIXTURE.

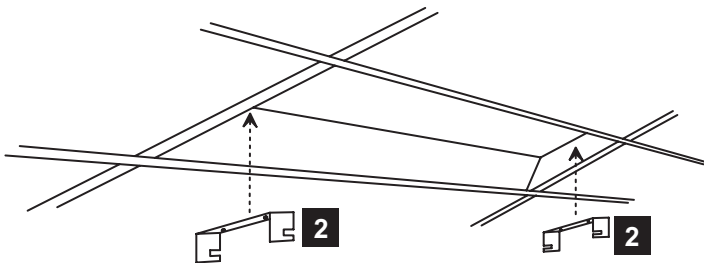

**PLEASE NOTE:**  
ACTUAL KIT MAY DIFFER FROM  
THE ONE SHOW.

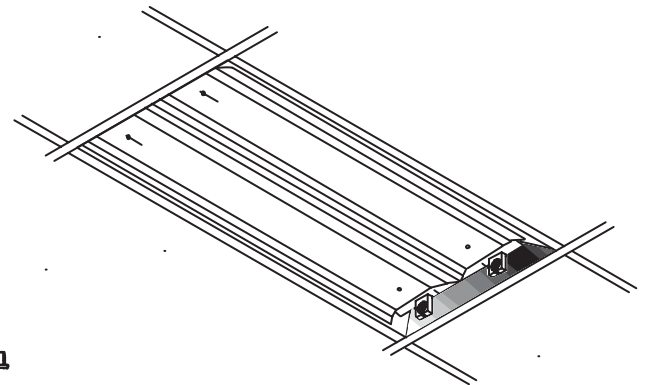

4. HANG RETRO-KIT FROM MOUNTING ANGLE USING THE "S"-HOOK AT THE END OF THE SAFETY CABLE AND CRIMP CLOSED. SCREW GROUND WIRE TO THE EXISTING HOUSING USING A SINGLE "TEK" SCREW.
5. CONNECT POWER SUPPLY LEADS TO BALLAST LEADS.
- 6** INSERT FIXED END OF RETRO-KIT INTO ENGAGEMENT HOOKS OF MOUNTING BRACKET.
- 7** RAISE THE ASSEMBLY INTO THE HOUSING AND EXTEND THE TELESCOPING SOCKET PLATE INTO THE ENGAGEMENT HOOKS OF THE MOUNTING BRACKET.
8. TIGHTEN SCREWS SECURING THE TELESCOPING SOCKET PLATE.
9. INSTALL LAMPS, CLEAN OR REPLACE DOOR ASSEMBLY AND TURN ON POWER.

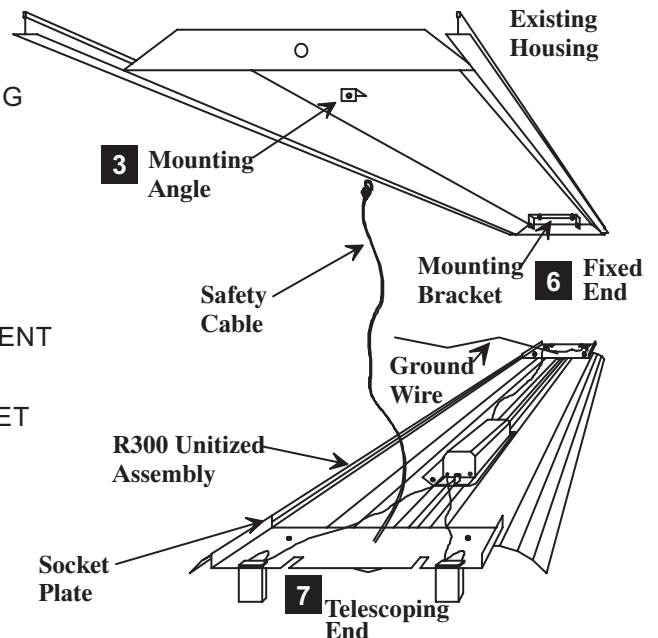

### NOTE

All fixtures must be installed, wired and grounded in accordance with the National Electric Code and all other applicable codes.

### !!! WARNING !!!

RISK OF FIRE OR ELECTRICAL SHOCK. ELECTRICAL PARTS MAY BE DAMAGED WHEN DRILLING OR USING "TEK" SCREWS FOR INSTALLATION OF MOUNTING HARDWARE. CHECK ENCLOSED WIRING AND COMPONENTS. USE CAUTION WHEN DRILLING "TEK" SCREWS INTO A BLIND AREA. TO PREVENT WIRING DAMAGE DO NOT EXPOSE WIRING TO SHARP EDGES.

